

## 360ACI - Dometic A/C Interface



### Links

- [Distributor resources](#) (requires distributor login )

### Frequently Asked Questions

What is the pinout of the RJ12 connector?

Pin number		Function
4-way plug	6-way plug	
-	1	N/C
1	2	V <sub>out</sub>
2	3	V <sub>in</sub>
3	4	GND
4	5	Data
-	6	N/C

When I interrogate or initialise the module, E-Logic reports "Time out reading module key at address XX!", is my module faulty?

No. As part of the interrogate and initialise procedures, E-Logic requests a piece of information called the module key. However this feature has not always been present, and the 360ACI has not yet been updated to support the command. This change is not critical, so it will only be made once other firmware changes are required.